


Product Specifications

Input Power	100~240 V	
Standby Power	Below 0.6 W	
Main Unit Consumption Power	53 W	
Battery	Lithium Ion	
Size	13.9 x 13.6 in	
Height	3.4 in	
Weight	7.1 lbs	
Speed	350 mm/s (Max)	
Charging Time	240 min.	
Usage Time (General Floor Standard)	Suction Power Level 1	120 min.
	Suction Power Level 2	90 min.
	Suction Power Level 3	70 min.

User Manual

iCLEBO 05

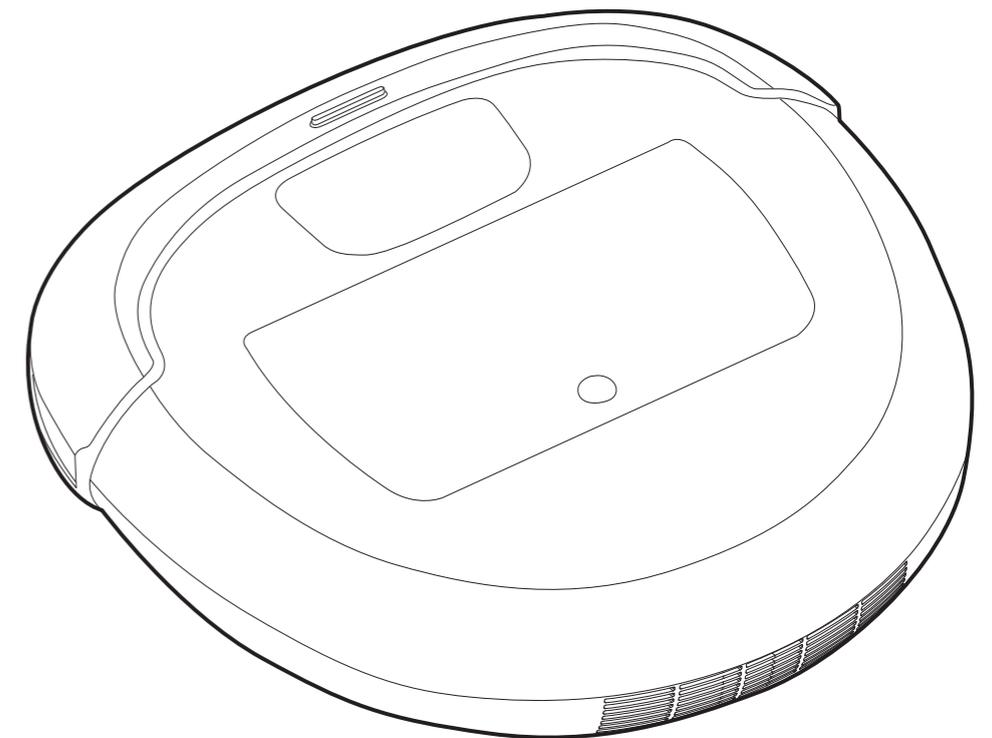

- Please read "Precautions for Safety" carefully before use and use correctly.
- The user manual includes the product warranty.
- Product appearance and specifications are subject to change for product improvement without notice.

Contents

Precautions for Safety	Power Related Issues	2
	Preparation Before Use	3
	Using the Cleaning Robot	4
	Maintenance After Use	5

Product Composition	Components	6
	Specific Names for Each Part	6

Preparation for Use	Side Brush Installation	8
	Battery Station Installation	8
	Initial Power Switch On/Off	8
	Charging	9

Using the Cleaning Robot	To Start/Stop Cleaning	10
	Choosing Cleaning Mode	11
	Choosing Cleaning Option	12
	Suction Power Setting and Smart Turbo	12
	Moving/Manual Cleaning	13
	Automatic Charging	14
	Mop Cleaning	15
	Entry Prevention Tape Installation	15

Care and Maintenance	Empty Dustbin and Change Filter	16
	Side Brush Care	16
	Main Blade Care	17
	Sensor Care	18
	Front Wheel Care	18
	Mop Care	19
	Storage	19
	Parts Exchange Period	19
	Reset Settings	20

Troubleshoot	Resolving Inspection Messages	21
	Notice Messages	21
	Items to Check Before Reporting a Problem	22

Product Warranty	23
-------------------------	----

Open Source Software	24
-----------------------------	----

Precautions for Safety

This is for the user's safety and to prevent property damage. Please read the following carefully and use safely. We recommend keeping this manual for future reference.



Warning

Failure to follow these instructions could result in serious injury or death.



Caution

Failure to follow the instructions may result in minor injury or product damage.





Reference

Failure to follow the instructions may result in minor injury or product damage.

Power Related Issues



Please be aware that there is a risk of electric shock or fire in case of carelessness.

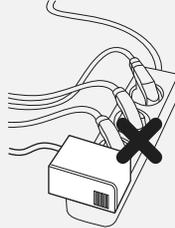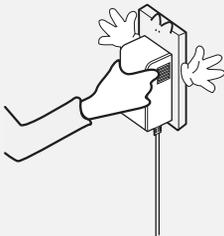




-  Do not touch the adapter with wet hands.
-  Be sure to hold the adapter while unplugging it. Do not insert or unplug the plug/jack unreasonably.
-  Do not use damaged plug/cord/outlet.
-  Use 5A outlets or ones with a higher wattage capacity.
-  Do not use the adapter for other products or for other purposes.
-  Check that the contact terminals are correctly connected.
-  If there is any foreign material on the adapter pins, wipe it off before use.

Preparation Before Use

Please read carefully for the safe and correct use of the product.

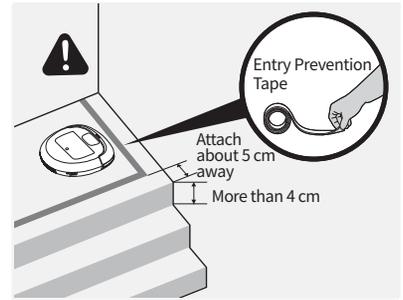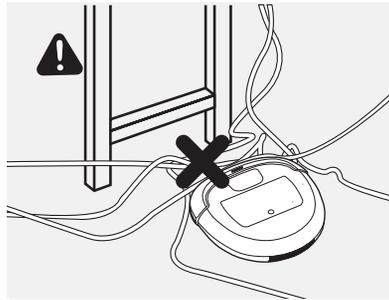



- ⚠ Remove fragile and small objects in advance.
- ⚠ If there is any water, oil, or animal waste on the floor, clean it before using the product.
- ⚠ Do not place the product near a heating device (such as a heater and electric pot).
- ⚠ Please arrange the cords neatly before use.
- ⚠ If you operate the product on a staircase or an area where there is a risk of falling from a height greater than 4 cm, please use after installing the entry prevention tape (sold separately).

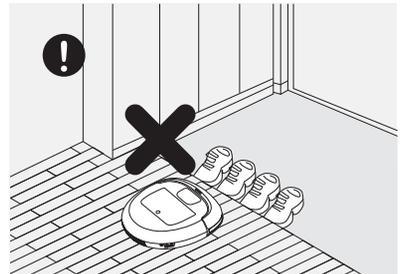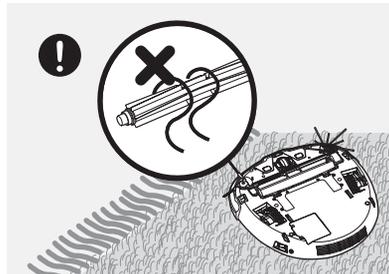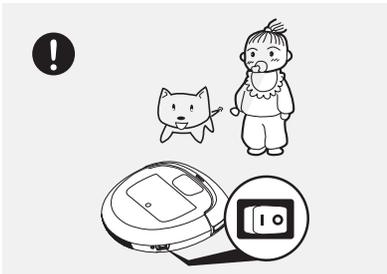




- ⚠ Please refrain from using the product around children or animals.
- ⚠ Please inform the people in the house before you start cleaning.
- ⚠ Please refrain from using in a room where a person or animal is asleep.
- ⚠ Long fringes of carpets should be arranged inward before you start cleaning.
- ⚠ Please refrain from using if the carpet fiber is long or easily damaged.
- ⚠ Please make sure that the main parts of the device are assembled well.
- ⚠ Please empty the dustbin before operating.
- ⚠ Guarantee space around the charging station by removing any obstacles.
- ⚠ Please open the door to the rooms for cleaning beforehand.
- ⚠ Please take care of small items that are not fixed beforehand.
- ⚠ Please leave shoes at a distance from the edge of the shoe compartment so the cleaning robot doesn't get on the shoe and slide down.

Using the Cleaning Robot

Please read carefully for the safe and correct use of the product.

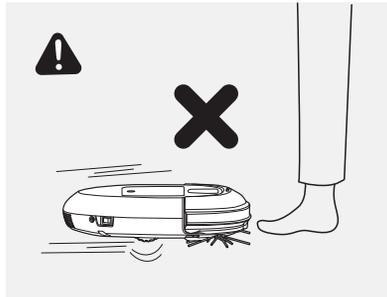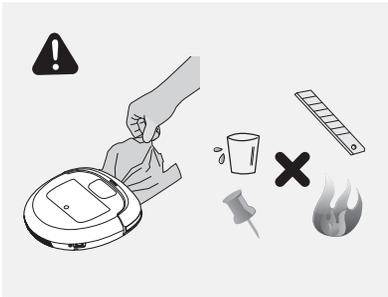




- ⚠ Be careful to not let foreign objects such as plastic bags, blades, tackles, and the like get inside the cleaning robot.
- ⚠ If the inlet is clogged by vinyl or the like, please remove the blockage immediately.
- ⚠ Be careful that the cleaning robot does not touch or ingest volatile substances.
- ⚠ Please be careful not to get a part of your body under the cleaning robot.
- ⚠ If the cleaning robot makes strange noises, smells, or smokes, stop using it immediately. Turn off the power switch on the side and contact the service center (855-926-1601).

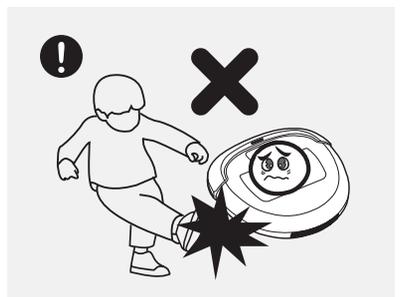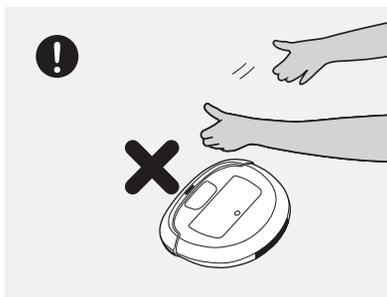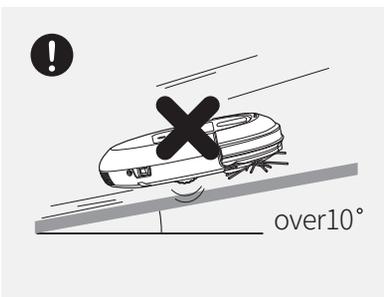

- ⚠ Do not use on floors with a slope greater than 10 degrees.
- ⚠ Do not apply strong force or drop the cleaning robot.
- ⚠ Do not use at high altitudes where there is a risk of falling.
- ⚠ Do not let children play with the cleaning robot.
- ⚠ If left unused for long time, please charge the robot for 2 hours before using it.
- ⚠ Please do not disturb the cleaning robot while it is on.
- ⚠ If damage occurs on materials such as wooden floors, please discontinue using the robot on such surfaces.

Maintenance After Use


Please be aware that there is a risk of electric shock and fire in cases of carelessness.

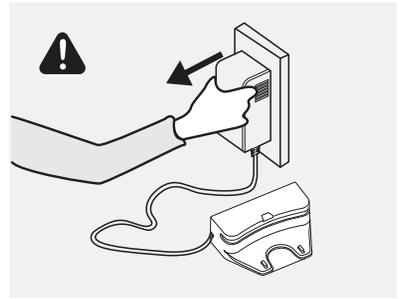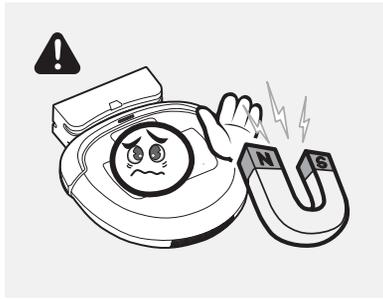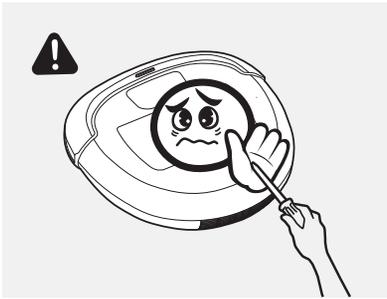

- ⚠ Do not disassemble or modify the cleaning robot.
- ⚠ Do not allow metal objects to come into contact with the product or the charging terminal.
- ⚠ When cleaning or managing the product, turn off the power or remove the plug.
- ⚠ Do not sprinkle water on the cleaning robot or wipe it with volatile materials.
- ⚠ When disposing of the battery, please do not throw it near a fire.
- ⚠ Regularly clean the sensor to prevent malfunctions.
- ⚠ If the cleaning robot and components are damaged, please contact the service center.




Product Composition

Components

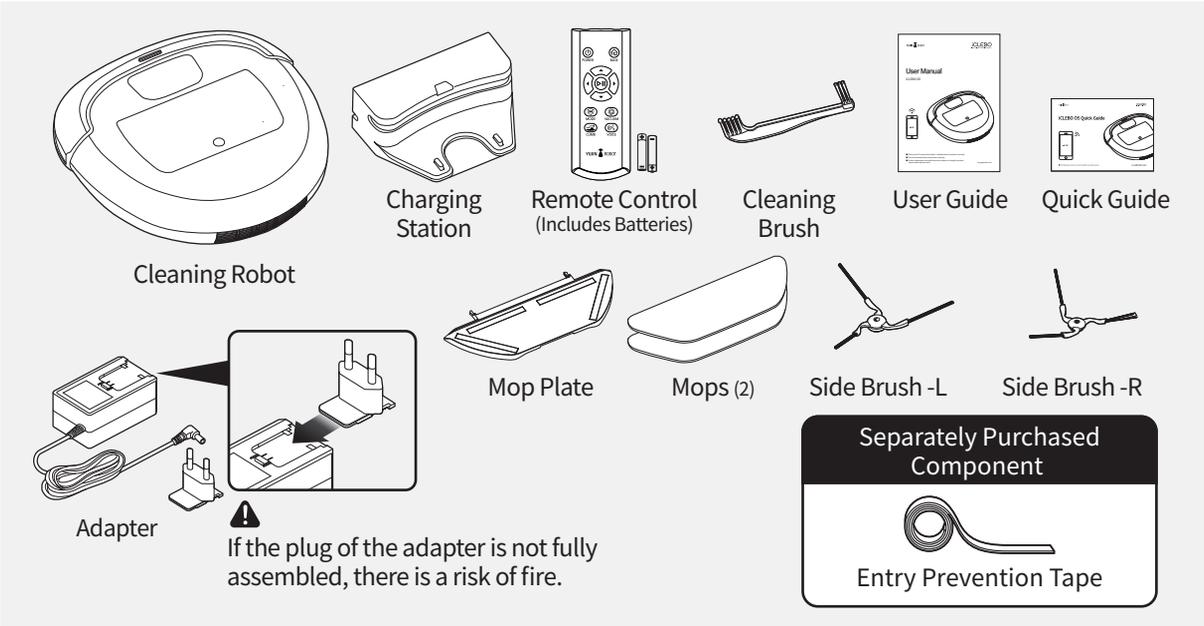


* The specifications and the form of the components may change due to the circumstances of the company.


Specific Names of Each Part

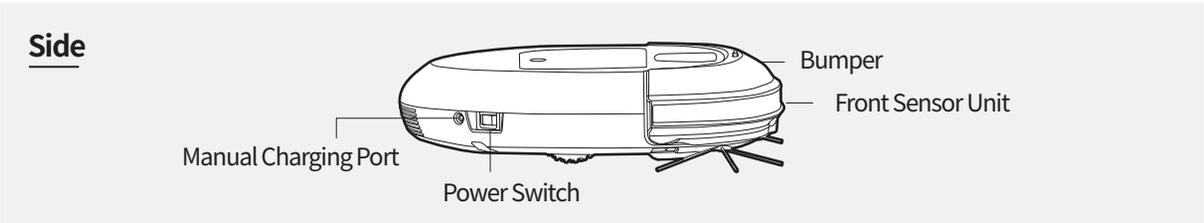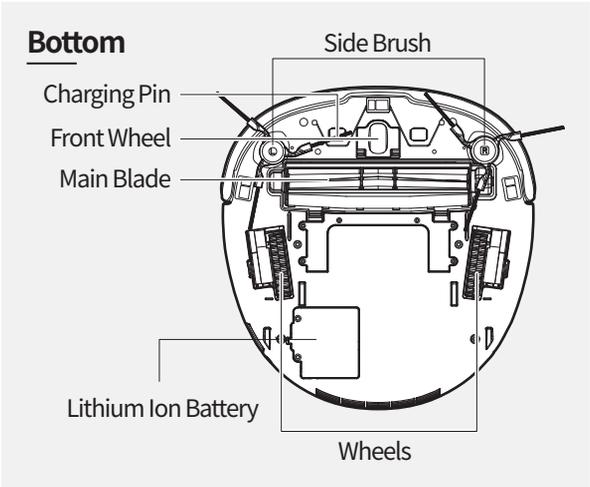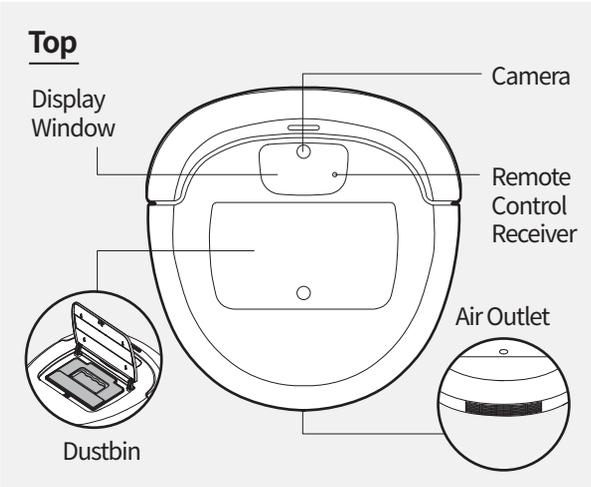


Charging Station

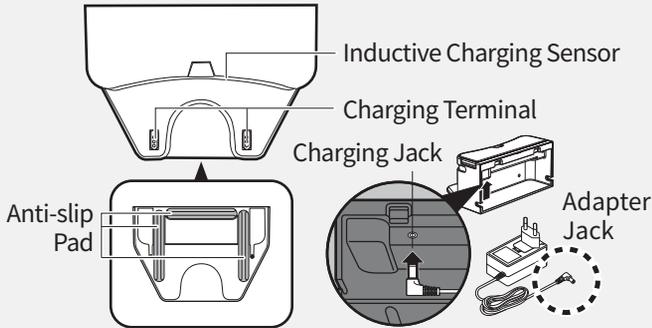


Dust Bin

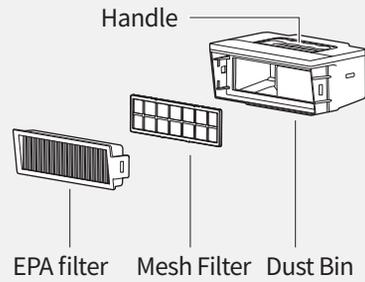

Display Window

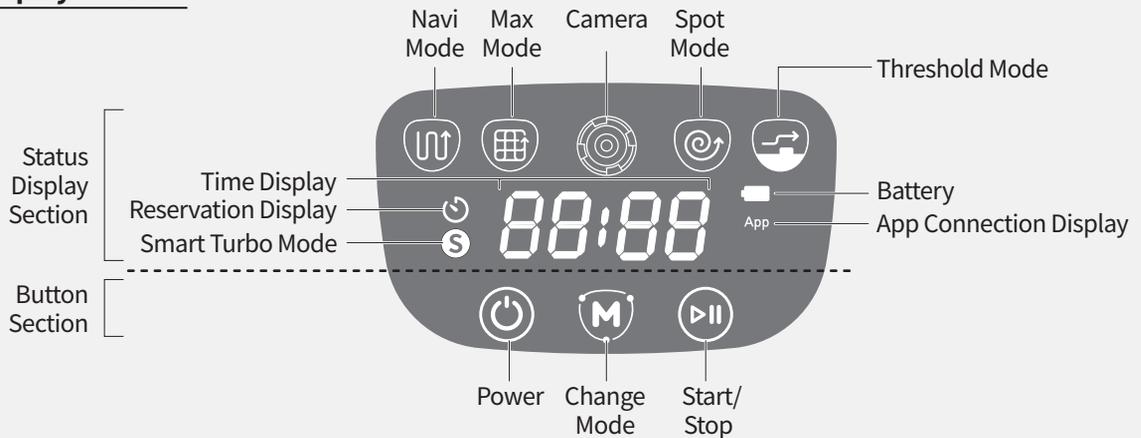


Remote Control

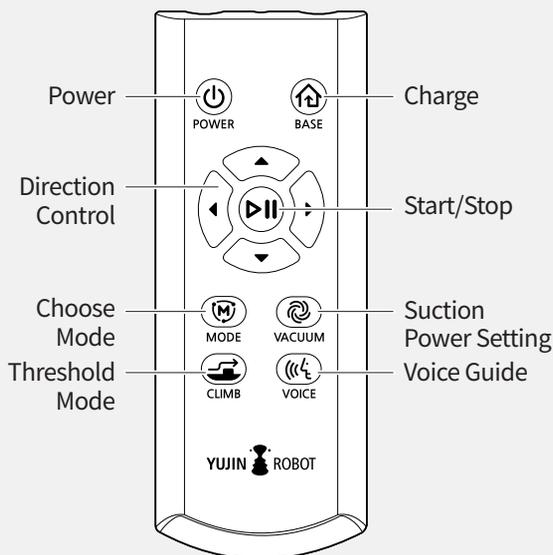

Installing the Remote Control Batteries

Please assemble and use the two AAA batteries included with the remote control at the time of purchase.

1. Slide the cover on the back of the remote control downward to open it.
2. Check the positive (+) and negative (-) terminals of the battery and assemble them accordingly.
3. Align the cover with the groove and slide it shut till it clicks into place.

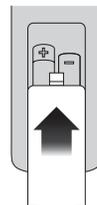


- ※ The remote control does not work when the cleaning robot's main power switch is off (O). Turn on the power switch (I) on the side of the main unit and use the remote control.
- ※ Please use the remote control pointed toward the cleaning robot.

Prepare for Use


Side Brush Installation



- You can reduce the scratching on the top plate by laying a soft cloth on the floor.
- If the side brush is not fully seated in the groove, it may come off during cleaning.

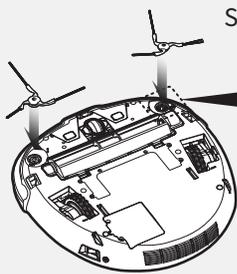


Side Brush Fixing Pin

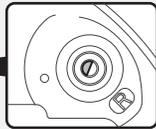

+


Side Brush Groove

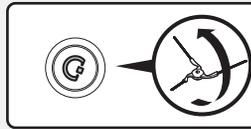

Align the side brush marked L towards the groove with the same marking (L). Align the side brush marked R with the groove with the same marking (R). Then, push the fixing pins in firmly to secure the side brush.


Charging Station Installation

1

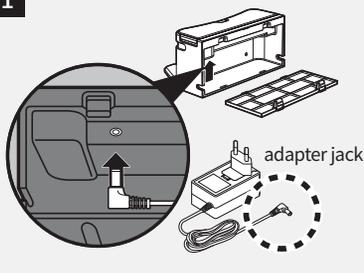


Connect the adapter jack to the charging station.

2

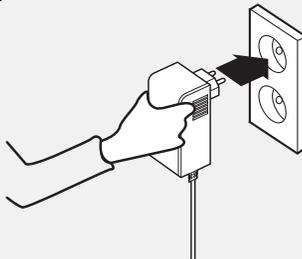


Connect the power plug into the outlet.

3

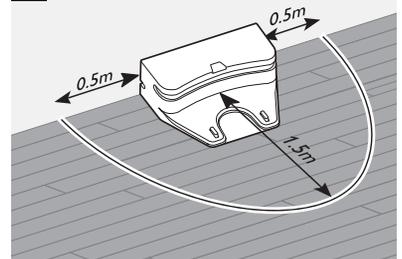

Install the charging station with 0.5m of space to the left and right and 1.5m of space to the front.

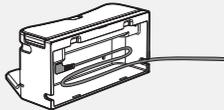

- You can put the adapter cord in the space behind the charging station.

Initial Power Switch On / Off



Turn on (I) the power switch on the side of the main unit. It turns off when O is pushed.
(Please press ON for products with an ON / OFF switch.)




Charging

Initial Charging



· Charge fully before using the product.

1

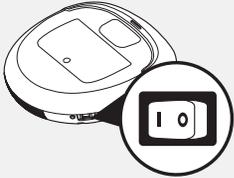


1. Make sure that the switch on the side of the product is turned on.
→ Refer to P8 <Initial Power Switch On/Off>

2



2. Start charging the battery by aligning the charging pin on the bottom of the main unit with the terminal of the charging station.


3

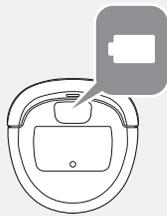

3. Check the charging status. When charging, the lamp blinks in the display window. When charging is completed, the battery status lights up green.

Charging Status Display	Charging		Charging Complete	
Display Window	Red Light	Yellow Light	Green Light	
Display Window	Red Light	Red Light	Yellow Light	Green Light
Battery Charging Status	Below 10%	Below 11-20%	Below 21-50%	Above 51%

Manual Charging

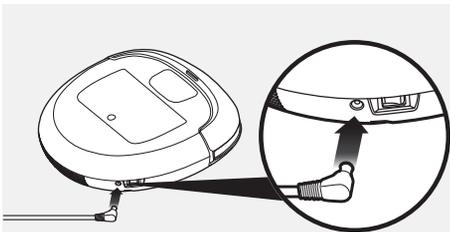

Connect the charging jack of the adapter directly to the main unit.

Using the Cleaning Robot


To Start/Stop Cleaning

Press the corresponding button on the robot or the remote control to start cleaning. Please do the same to stop cleaning.



Robot

or

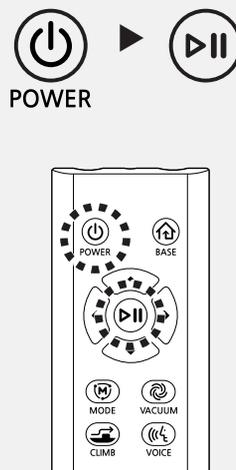

Remote Control

Choosing the Cleaning Mode




· The “Navigation” mode is set by default if there is no other operation input.

Press the MODE button on the robot or the remote control to select the desired cleaning mode.



Robot

or

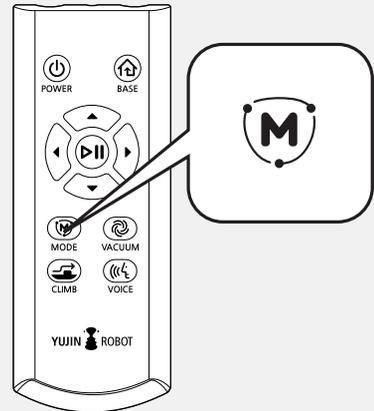

Remote Control

Mode Types	Display Window	Explanation
Navi Mode (Default Setting)		This is a zigzag cleaning method through camera navigation mapping. ※ The display window shows the time of cleaning.
Max Mode		After the navi mode cleaning is finished, the cleaning robot rotates 90 degrees and repeats cleaning. ※ It continues to clean until the battery runs out.
Spot Mode		This is a concentrated cleaning in a circular whirlpool manner within a 1-2m range. ※ It cannot be set if the cleaning robot is charging.

Choosing Cleaning Option


Option	Display Window	Setting Method	Explanation
Threshold		Press the CLIMB () button on the remote control to set and cancel accordingly.	Used in carpet or covered environments (climbs up to 15mm). ※Threshold mode is automatically released when the mop plate is mounted. ※If you cancel the threshold mode during carpet or mat cleaning, the robot may not come down from the carpet or mat. ! It is recommended to not operate in threshold mode for carpets with long or special material fibers. This may damage the carpet or cause additional problems.
Mop		Mount the mop plate at the bottom of the cleaning robot.	It is possible to mop and vacuum at the same time by attaching the mop plate. ▶Refer to P15 <Mop Cleaning>
Voice Guide		Press the VOICE () button on the remote control to set and cancel.	It informs the robot status or error situation by voice. ※It is set as default. ※Turning off the sound effect is not supported.

Suction Power Setting and Smart Turbo



· The suction power can be adjusted within 3 levels in total. Level 2 is the default setting.

Press the VACUUM button on the remote control to set the suction power.

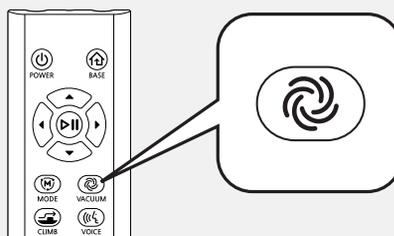

Remote Control


Option	Display Window	Setting Method	Explanation
Smart Turbo (Default Setting)		Press the VACUUM () button on the remote control for more than 3 seconds to set and cancel the Turbo mode.	It recognizes that there is a lot of carpet or dust and automatically raises the suction power to Level 3. ※When the carpet or cleaning of the dusty area is completed, the suction power returns to the original. ※If you want to use the Level 1 suction power without the Smart Turbo Function, you can turn off the Smart Turbo.

Moving/Manual Cleaning




- If you press the control button during cleaning, you can perform manual cleaning.
- When the control button is pressed in the standby mode, the cleaning robot simply moves.

You can use the control buttons on the remote control to move the cleaning robot to a desired location.

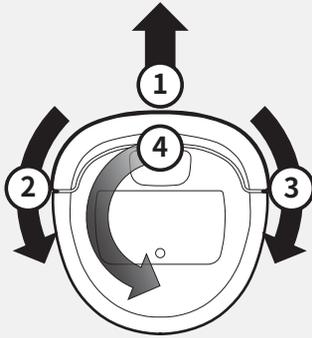

Product

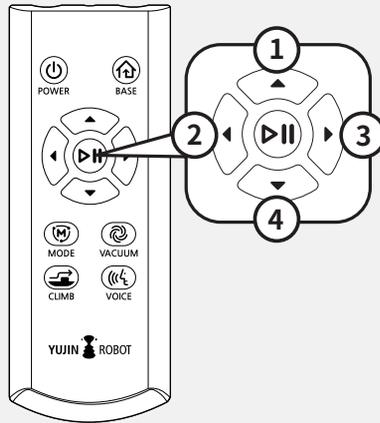


- ① Straight
- ② Left
- ③ Right
- ④ 180° direction change

Remote Control

Automatic Charging

If you want to charge while in use, press the BASE (charge) button on the remote control.

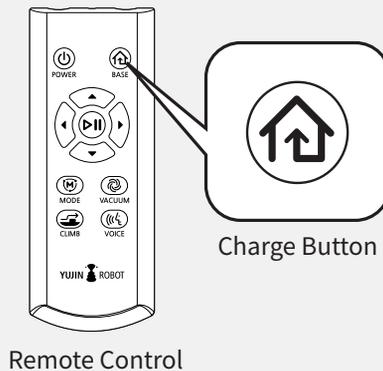

- When cleaning is complete, it automatically returns to the charging station.
- If the remaining battery power is low during cleaning, it automatically returns to the charging station and after charging, returns to the remaining cleaning area to clean again.



- If the battery is discharged and the 'LO' message appears, transfer the product to the charging station to charge it.




- If cleaning has not started at the charging station, it returns to the point where cleaning started.
(If the cleaning robot recognizes the charging station while returning to the starting point, it returns to the charging station.)

Mop Cleaning




- By attaching a mop, you can both vacuum clean and mop at the same time.
- If you install the mop plate, it cannot cross thresholds.

1

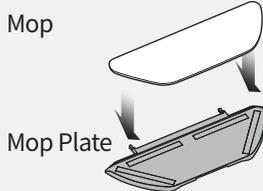

1. Attach the mop to the mop plate.

2

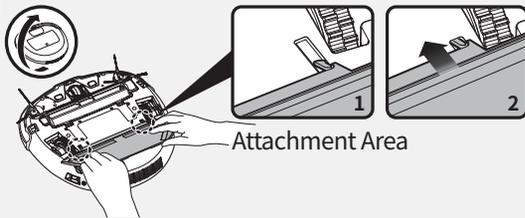




2. After turning the product over, push the mop plate in the direction of the arrow and attach it.

※If it is not attached correctly, the mop plate may detach.

Entry Prevention Tape Installation (Sold Separately)



- When installing the entry prevention tape, attach the tape in a sealing shape 15 cm away from the area you do not want entry to.
- Entry prevention tapes can be ordered via our distributor of your country.

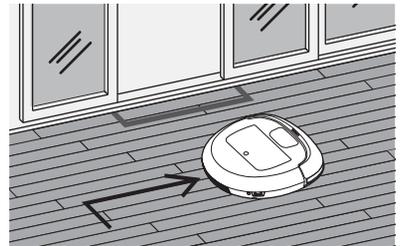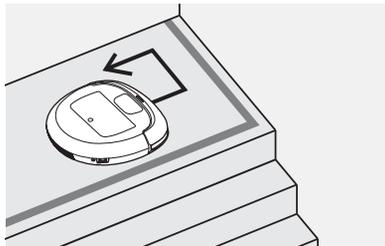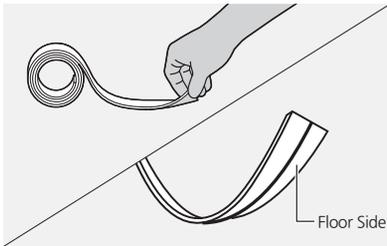

Please install the entry prevention tape around railings, toilets, and staircase entrances where there is a danger of a fall. Install the tape so that the grooved side of the tape faces the floor.

※Please use the enclosed double-sided tape to fix the entry prevention tape.


→ If the entry prevention tape is not fixed to the floor, the cleaning robot may not recognize it properly.



- If dust accumulates on the fall prevention sensor of the product, the cleaning robot may not recognize the prohibited area and may fall.



Fall prevention sensor

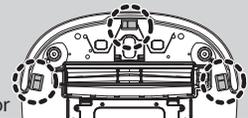



Care and Maintenance



- Placing a soft cloth on the floor while managing the cleaning robot reduces scratches on the product.
- Turn off the power switch on the side of the robot for safety while managing the cleaning robot.



Empty Dustbin and Change the Filter

1

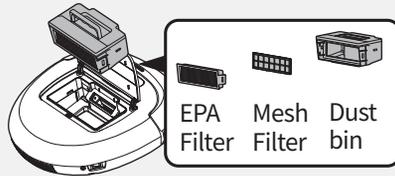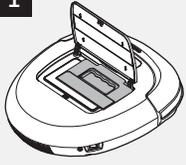


1. Separate the dustbin from the main unit of the cleaning robot.

2

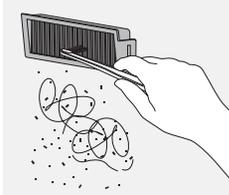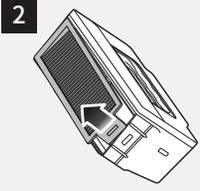

2. Remove the filter as is shown in the picture and clean the inside properly.
※ However, please remove the water completely before assembly.


3

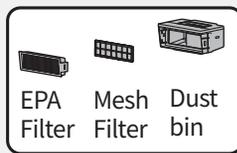

3. When replacing the filter, replace only the EPA filter and reassemble it.
※ The filter can be washed with water. (1 time per month)
※ To maintain the filter performance, it is recommended to empty the dustbin every time cleaning is completed.


Side Brush Care

1

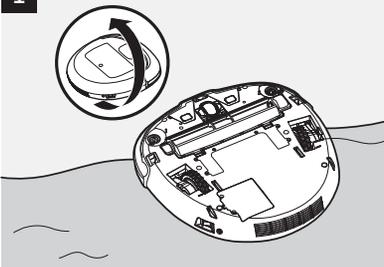


1. Place the cleaning robot so the bottom side is facing up.

2

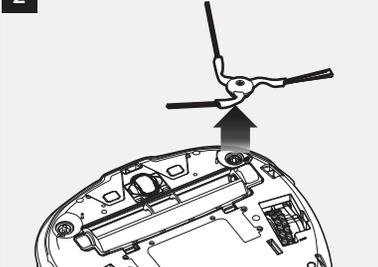

2. Hold the side brush with both hands and pull upward to disassemble.



3

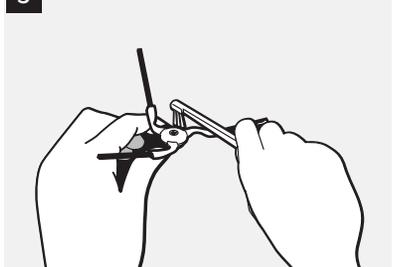



3. Use the cleaning brush to remove dust and foreign materials.

※When cleaning with water, wait until the side brush is completely dry before use.



Main Blade Care

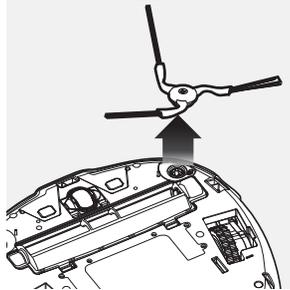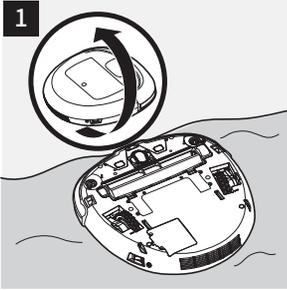




1. Place the cleaning robot so that the bottom side is facing up and take out the side brush.

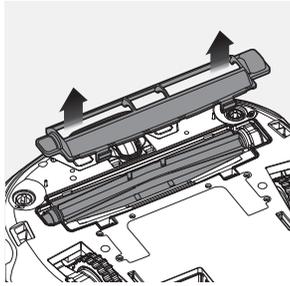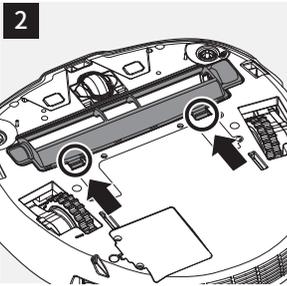


2. Unlock the fixing clip of the main blade cover and take out the cover.

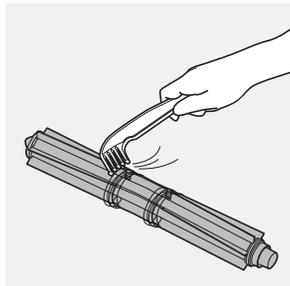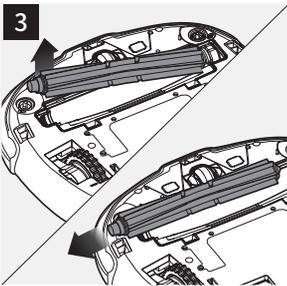



3. Take out the main blade and remove foreign materials.

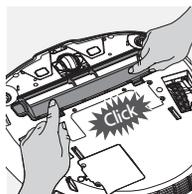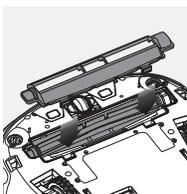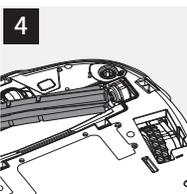

4. After cleaning the main blade, identify the sides and reassemble the main unit.

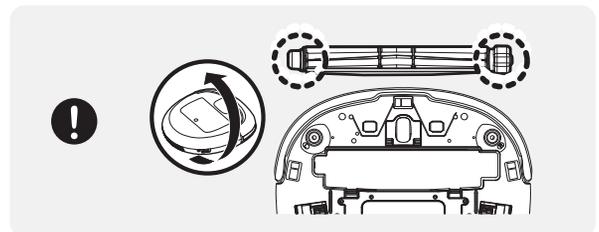


Sensor Care

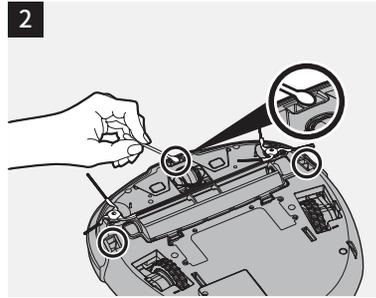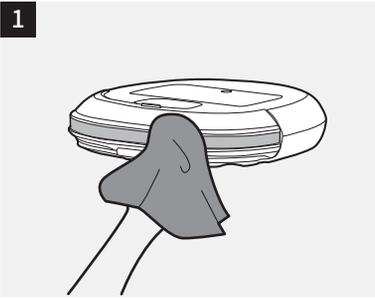


Use a cotton swab or a soft cloth to wipe the front and bottom sensor areas of the cleaning robot.


Front Wheel Care

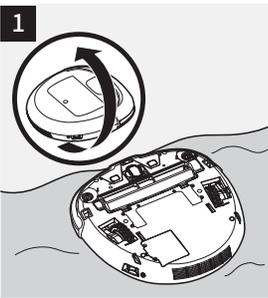


1. Place the cleaning robot so the bottom side is facing up.

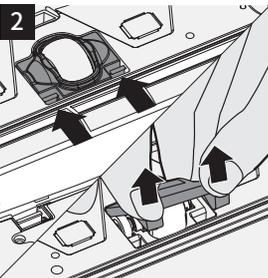


2. Press the front wheel fixing cover with both hands and pull it up to remove it.

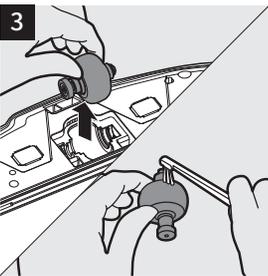

3. Take out the front wheel and use the cleaning brush to remove dust and foreign materials.

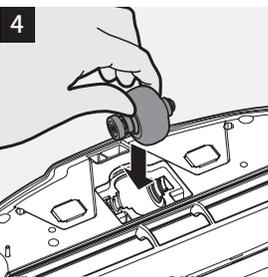

4. Reattach the front wheel and reassemble the cleaning robot.

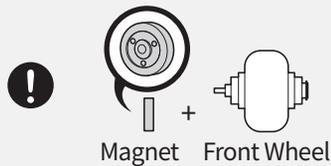

· When removing the magnet, reassemble it with the front wheel so that the shape as shown in the picture is facing outward


Mop Care



After cleaning with a mop, wash the mop and dry it completely

- ! It may smell if it is not completely dry.
- ! If you leave the wet mop on the floor for a long time, it may soak the floor.

Storage

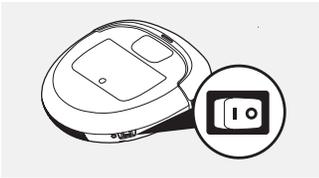

- ! If the robot is not used for a long time, turn off the power switch on the side of the main unit.
- ! Even if you turn off the power switch and store it for a long time, the battery may discharge naturally. (6 months battery warranty)
- ! Please store at room temperature and avoid direct sunlight.
- ! Do not place objects on the main unit during storage. This may cause a malfunction.

Parts Exchange Period

Category	Image	Recommended Exchange Period	Notes
Filter		3 Months	You can wash it with water once a month.
Mop		3 Months	Please replace it if it becomes badly damaged or dirty.
Main Blade		When necessary	Please exchange it; it does not clean well if the blade or side brush is worn out.
Side Brush			
Battery Pack		12 to 18 Months	Please replace it if the charging time and cleaning time shortens drastically. (The battery warranty period is 6 months.)

- The recommended replacement cycle is based on the assumption that the cleaning robot is used once a day.
- The replacement cycle varies depending on the environment, such as the size of the home and the number of cleaners use.
- The recommended replacement cycle is advised for maintaining the cleaning power and is not a necessity.
- All parts must be replaced immediately, irrespective of the recommended replacement cycle, in the event of breakage or deformation.

Parts Purchase



If you would like to purchase accessories such as batteries or brushes for the cleaning robot or filters, please feel free to contact with our distributor of your country.

Reset Settings



The cleaning robot needs to reset its settings when the Wi-Fi information near the cleaning robot changes.

1




Press for about 5-6 seconds.

1. Press and hold the M (Mode) button on the cleaning robot display window for about 5 to 6 seconds.

2



Press and hold.

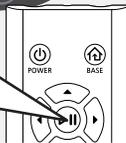

2. When "rSt" appears in the display window, press and hold the play button on the remote control.

3



Resetting.

3. "rSt" appears in the display window and the reset begins.

4



Restart when you see "End".

4. When "End" appears with a beep sound, turn the power off before turning it back on again.

Troubleshoot

Resolving Inspection Messages



Please refer to the causes and solutions according to the check message on the display when an error occurs.

After resolving the problem, press the start/stop button (▶||) to continue cleaning.

Check Message	Cause	Solution
88:00	Lifted Wheel	If the wheel is caught on the materials such as the threshold or the veranda, please move the cleaning robot to a flat location.
88:02	Undetected Floor	Please move the cleaning robot to a flat location.
88:03	Undetected Dustbin	The dustbin is not assembled correctly. Be sure to mount it correctly by reviewing the “Maintenance, Management” section.
88:04	Wheel Motor Overload	Check if your wheels are covered with hair or lint. Remove the foreign object by reviewing the “Maintenance, Management” section.
88:05	Main Blade or Side Brush Overload	Check if the main blade and side brush have hair or lint. Remove the foreign object by reviewing the “Maintenance, Management” section.
88:06	Suction Motor Overload	Review the “Maintenance, Management” section to clean the filter and empty the dustbin.
88:07	Internal System Error	Turn the power switch of the cleaning robot off and then switch it back on.
88:08	Magnetic Sensor (Front Wheel Location) Malfunction	After cleaning the front wheel, make sure that the magnet is installed correctly. → P18
88:09	Battery Discharge	Please move the product manually and charge it.

Notice Messages

Notice Message	Content
88:88	It is displayed when it returns to the starting point after cleaning is finished or when the cleaning robot update is completed.
8A:5E	It is looking for the charging station. It is displayed when charging is needed during cleaning or when cleaning is completed and it is returning to the charging station.

Items to Check Before Reporting a Problem



- The table below describes the most common "malfunctions" during use.
- If you can not resolve the problem using the information described below, please feel free to contact with our distributor of your country.

Symptom	Cause	Solution
It does not clean well.	▶The dustbin is already full.	▶Please empty the dustbin after consulting "Care and Maintenance" section.
	▶There is dust trapped between the filters and the air cannot be released.	▶Please clean the filter after consulting "Care and Maintenance" section.
	▶Hair is tangled in the main blade and is preventing operation.	▶Please clean the main blade after consulting "Care and Maintenance" section.
Cleaning robot does not turn on even when the power switch is on.	▶The battery is low.	▶Please charge.
The cleaning robot does not react or works only in one place.	▶The power switch is in the OFF (O) state.	▶Check the power switch on the side of the main unit.
	▶The battery is low.	▶Recharge the cleaning robot.
	▶The remote control is not working.	▶Check the remote control battery and use it.
	▶The cleaning robot's bumper is pressed in.	▶Use a soft cloth to wipe the beam receiver or the infrared sensor on the remote. ▶Press the bumper part several times.
The cleaning robot does not charge.	▶The charging station or cleaning robot is not connected to the plug correctly.	▶Make sure the cleaning robot is connected to an appropriate charging station of proper wattage.
	▶There is a foreign substance on the charging terminal preventing contact.	▶Clean the charging terminals of the cleaning robot and the charging station with a soft cloth.
The cleaning robot does not return to the charging station after cleaning.	▶The power of the charging station is not connected correctly.	▶Connect the power of the charging station properly.
	▶The charging station is not properly installed.	▶Please move the charging station. Make sure there is nothing within 0.5m to the left and right of the charging station, and 1.5m to the front. This is so that the cleaning robot can automatically return to the charging station after cleaning.
	▶The cleaning robot started at a different point than the charging station.	▶To return to the charging station after cleaning, it must start cleaning at the charging station.
The cleaning robot's noise is gradually increasing.	▶The dustbin is full or the filter is dirty and air cannot escape	▶Empty the dustbin or clean the filter by reviewing the "Care and Maintenance" section.
	▶A foreign substance is stuck to the main blade and the friction is generating noise.	▶Clean the main blade by reviewing the "Care and Maintenance" section.

Yujin Robot Co., Ltd. – Limited Warranty

A. Limited Warranty

Our official distributor of your country warrants the product line of the iCLEBO Robotic Vacuum Cleaners (O5, Omega, Arte, Pop) purchased, from an our distributor of your country. Authorized Reseller, to be free from defects in materials and workmanship under normal use during the period specified below. The warranty period begins on the date of purchase. Your original purchase invoice (sales receipt), is your proof of the date of purchase. If you cannot provide the original purchase invoice (sales receipt), the warranty period will be based on the manufacture date-code shown on the product.

The warranty period for the product line is as follows: (1) Year Parts and Labor. This warranty extends only to you, the original purchaser. It is not transferable to anyone who subsequently purchases, leases, or otherwise obtains the product from you. This warranty excludes expendable parts such as filters and blades, which needs normal replacements after heavy usage. During the warranty period, our official distributor of your country will repair or replace defective hardware with factory manufactured parts and products. All exchanged parts and products replaced under this warranty will become the property of our official distributor of your country during the warranty period, there will be no charge for labor or parts. A replacement of product is solely determined by Yujin Robot's own diagnostic results. In cases where an exchange is authorized and no exact same model is available, our official distributor of your country will always replace with equal or better unit.

B. Warranty Limitation; Exclusion; Exclusive Remedies

- 1) This Limited Warranty does not extend to any product that has been physically damaged during or as a result of use other than for its normal intended purpose. Failure to use the product in accordance with the user's manual, which accompanies it, voids warranty.
- 2) By the use of parts not manufactured or sold by our official distributor of your country.
- 3) By modifications of the product.
- 4) Products purchased and used outside of the illegal merchant(online/offline).
- 5) As a result of services by anyone other than our official distributor of your country.
- 6) Improper transportation or packing when returning the product to our official distributor of your country.
- 7) Unusual physical or electrical stress or interference, failure or fluctuation of electrical power, lighting, static electricity, fire, or nature disaster. Some states or provinces do not allow the exclusion or limitation of incidental or consequential damages for consumer products, and some states or provinces do not allow limitation on how long an implied warranty lasts. In such states and provinces, the exclusion or limitation of this limited warranty may not apply to you.

C. Obtaining Mail-In Warranty Services are subject to the following terms and conditions: you are entitled to the following services during the applicable warranty period.

- 1) Prior to obtaining service you must contact with our official distributor of your country. our official distributor of your country to have a technical support member attempt to help you resolve the issue over the phone. Please have the model number, serial number, place of purchase and date of purchase ready when you call. The serial number (S/N) and model number are located on the back of the product.
- 2) During the problem resolution, our official distributor of your country will require your assistance in performing routine diagnostic procedures to try to solve the issue. If required, our official distributor of your country will then issue you a Return Merchandise Authorizations (RMA) number to be used as a means of identifying the product and its specific failures when its received.
- 3) Include your name and address, proof of the place and date of purchase (sales receipt), the serial number and model number of the product. The serial number and the model number are located on the back of the product or on the outside of your original box.
- 4) Our official distributor of your country is not responsible for a product shipped to the our official distributor of your country that has been scratched or damaged during transport, including but not limited to; the product, and its accessories. Products shipped to the our official distributor of your country with missing parts will be returned without those parts. If authorized by the customer, products that are beyond repair will be replaced with Yujin Robot manufactured product in equal or better specs as the original product that was returned, should the same model not be available.

Please Note: Warranty is only valid for the original owner purchased from an authorized reseller. Second owners or e-Bay purchase carry no warranty unless valid by date-code only. All returns, exchanges, refunds, or repairs should be referred back to the origin of purchase. Proof of purchase(sales receipt) will be required for all warranty services.

Open source software

A part of this product's software component includes open source code. Yujinrobot Co., Ltd provides a complete copy of the corresponding open source code.

Visit www.iclebo.com to obtain source code.

Menu **Customer Service** -> Select **Open Source** Download